


Istruzioni di montaggio e manutenzione

Prima di allacciare il soffione all'impianto idrico assicurarsi che quest'ultimo non contenga impurità che possano danneggiare il soffione.


Inserite sempre la guarnizione filtro (fornita in dotazione) tra il corpo soffione e l'impianto idraulico al fine di prevenire ogni futuro danno al soffione.

Se nel vostro impianto idraulico la pressione è superiore a 2 Bar è obbligatorio l'utilizzo della valvola di riduzione della portata (fornita in dotazione).

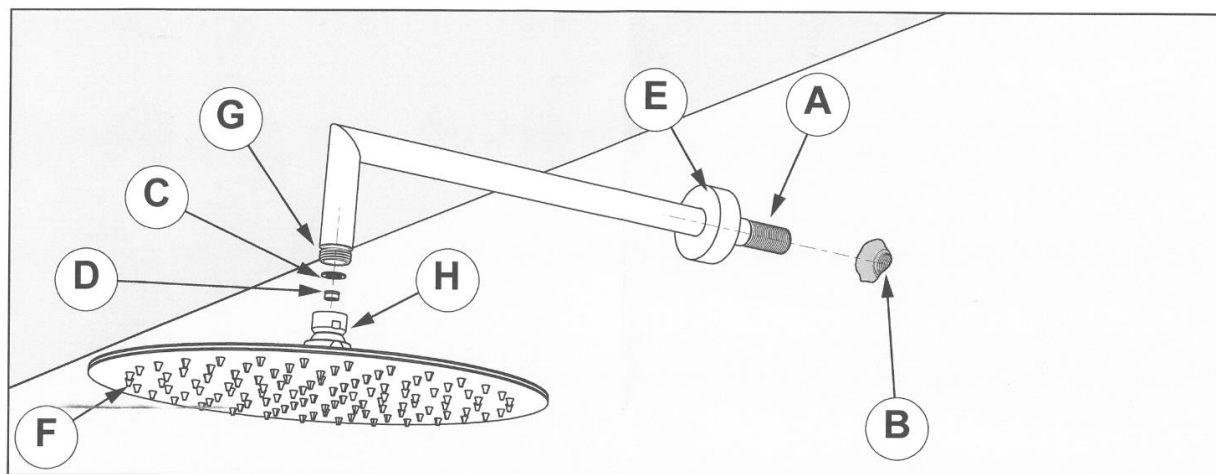

Per una corretta installazione del Vostro nuovo soffione seguite attentamente le istruzioni qui sotto riportate:

1. Dopo aver verificato la pulizia del Vostro impianto idraulico avvitate, fino alla posizione desiderata, il raccordo filettato del braccio doccia (A) nel raccordo presente nel muro (B).
2. Riposizionare il rosone (E) in modo tale da nascondere il raccordo a muro.
3. Avvitate il corpo soffione (F) al braccio doccia (G) prestando attenzione ad interporre tra di essi sia la guarnizione filtro (C), sia il riduttore di portata (D).
4. Verificate la corretta tenuta idrica del soffione appena installato.
5. Per dirigere al meglio il getto del soffione, orientatelo nella maniera corretta servendovi dello snodo (H).

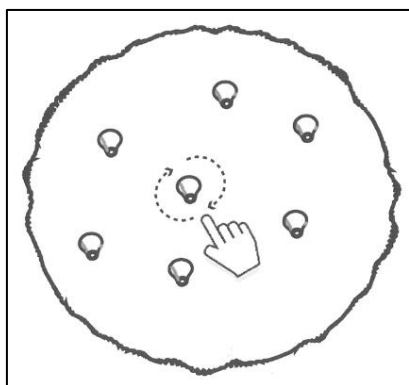

ATTENZIONE:


Il Vostro soffione è dotato di testarelle di erogazione in silicone. Durante il normale utilizzo queste potrebbero ostruirsi; per una corretta pulizia è sufficiente agire sulla singola testarella effettuando con il dito piccoli movimenti rotatori atti a liberarla da ogni impurità. Eseguire questa manovra regolarmente (in caso di utilizzo frequente almeno una volta al mese) per mantenere sempre efficiente il soffione.

Installation and maintenance instructions

Before connecting the shower head to the water plant, please make sure that it is clean and that it doesn't contain any impurity that might damage the shower head.


Always insert the provided filter gasket between the shower head and the water plant, in order to prevent future damages.

If the water pressure of your system is above 2 bar, it is mandatory to use the supplied flow reducer.

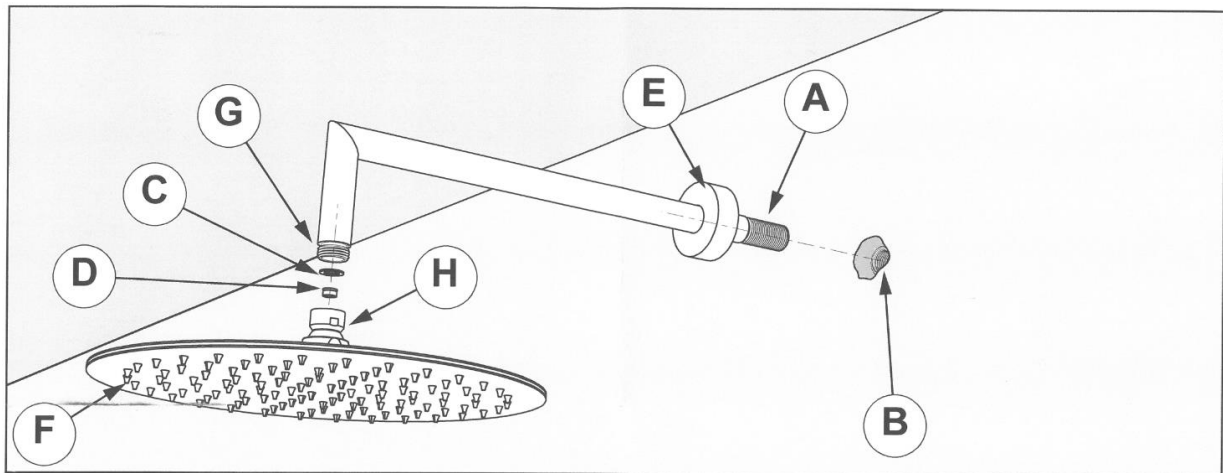

In order to install your new shower head, please follow the instructions here below:

6. Verify that your water plant is clean. Screw the threaded bar (A) of the shower arm into the wall outlet (B) until it reaches the desired position.
7. Slide back the aesthetic cover cap (E) in order to cover the hole on the wall.
8. Screw the shower head (F) into the arm (G) making sure that you inserted both the filter gasket (C) and the flow reducer (D).
9. Check the correct water tightness of the shower head.
10. In order to direct the water flow in the correct position, you can adjust the shower head using the joint (H).

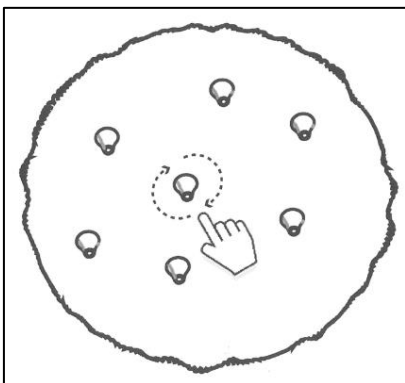

PLEASE NOTE:

Your new shower head has silicone nozzles that might get struck by limestone during normal usage. In order to clean them, move the silicone nozzle with your fingers making circular movements. Do it regularly (at least once a month, in case of regular use) in order to maintain your shower head in good shape.